X6A2G-STH

Combination Air Engaged Friction Clutch, Spring Engaged Friction Brake, Stop & Start the Shaft – Ball Bearing Pilot



Minimum Sprocket Sizes

| Chain Size | 50 | 60 | 80 | 100 |
|---------------|----|----|----|-----|
| Minimum Teeth | 34 | 29 | 23 | 19 |

Clutch Engagement/Brake Engagement

Air/Spring

Facing Type

High Coefficient

Clutch Torque @ 80 PSI (max) – Dynamic

2,706 Pound Inches

Brake Torque @ Spring Pressure (fixed)

256 Pound Inches

Brake Release Pressure

20 - 25 PSI

Maximum RPM


1,750

Bore Range with Standard Keyway


| 1.125 (29) to 2.000 (52) Inches (mm) | | | | |
|--------------------------------------|--|--|--|--|
| Air Volume New | | | | |
| 1.82 Cubic Inches | | | | |
| Air Volume Worn | | | | |
| 6.13 Cubic Inches | | | | |
| Finish | | | | |
| Aluminum | | | | |
| Open or Enclosed Construction | | | | |
| Open | | | | |

Shipping Weight

42 Pounds

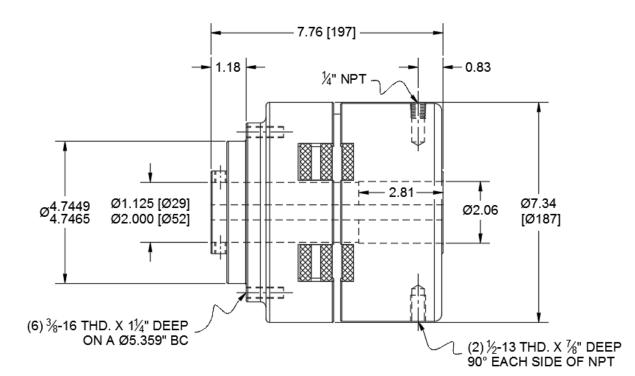

TORQUE vs. AIR PRESSURE

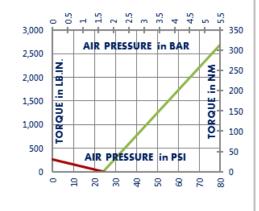

NEW vs. BURNISHED TORQUE

The torque output of a new friction brake or clutch can be up to 40% less than the published torque rating. To achieve full design torque, a unit must be cycled under load to burnish the friction surfaces. The exact number of cycles varies by application.

When calculating required torque always use a safety factor of 1.5 to 2. It is not recommended to select a product for use at its maximum rated torque for continuous duty.


PRODUCT SELECTION

Torque capacity is only one factor to consider when making a product selection. Ensure that you will have the right product for the job by contacting our engineering department for application review and selection assistance.



1580 Lake Street Elmira, NY 14901 USA 859-291-0849 machiii.com

engineering@machiii.com

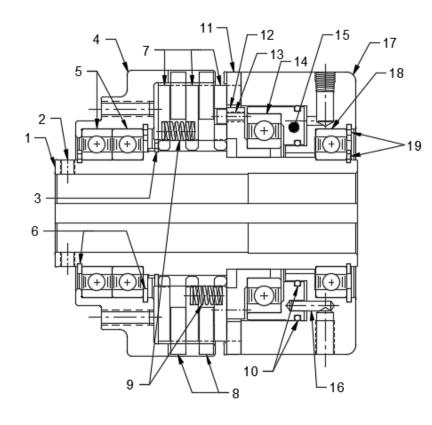

| REF# | DESCRIPTION & PARTS INCLUDED | QUANTITY | KIT NUMBER |
|------|------------------------------|----------|---------------------------------|
| | DRIVE HUB KIT | | W6A2G-STH-HUBK |
| 1 | Drive Hub | 1 | Specify Bore Size When Ordering |
| 2 | Set Screw | 2 | |
| 3 | Retainer Ring | 1 | |
| | SLEEVE KIT | | C6A2G-STH-SLVK |
| 4 | Sleeve | 1 | |
| 5 | Bearing | 2 | |
| 6 | Retainer Ring | 2 | |
| | DRIVE DISC KIT | | W6A2G-STH-DRDK |
| 7 | Drive Disc | 3 | THE STORES |
| | REPAIR KIT | | X6A2G-STH-RPRK |
| 8 | Friction Disc | 2 | A0AZG-STH-KPKK |
| 9 | Spring | 14 | |
| 10 | O-Ring | 2 | |
| 11 | Brake Friction Disc | 1 | |
| | PISTON KIT | | X6A2G-STH-PSTK |
| 12 | Cone | 4 | A0A2G-STR-PSTK |
| 13 | Screw | 1 | |
| 14 | Bearing | 1 | |
| 14 | Piston | 1 | |
| 1.5 | | | |
| | CYLINDER KIT | | X6A2G-STH-CYLK |
| 16 | Pins | 6 | |
| 17 | Cylinder | 1 | |
| 18 | Bearing | 1 | |
| 19 | Retainer Ring | 2 | |

PARTS KITS

The *Repair Kit* contains common wear items for this product. Users are encouraged to stock one or more repair kits considering the number of units installed and the potential downtime if machinery on which the unit is installed is critical equipment. To obtain current pricing and lead time for parts kits, contact customer service.

orders@machiii.com

ADDITIONAL PRODUCT INFORMATION

For illustrated guides showing how Mach III products work, selection guidelines, product manuals, and installation and use recommendations:

https://machiii.com/resources/how-our-products-work

For information about how to order, return policy and warranty information:

https://machiii.com/resources/how-to-order



859-291-0849 machiii.com engineering@machiii.com