T6A2G-STL

Mechanical Friction Torque Limiter Through Shaft Bored, Pilot Mount



Designed for brief overloads.

Does not automatically disconnect.

Minimum Sprocket Sizes

Chain Size	50	60	80	100
Minimum Teeth	34	29	23	19

Engagement/Disengagement

Spring/None

Facing Type

Low Coefficient

Minimum Torque Setting

620 Pound Inches

Maximum Torque Setting (Spring Compression ≈ 17%)

6,140 Pound Inches

Maximum RPM

1,750

Bore Range with Standard Keyway

1.438 (37) to 2.000 (52) Inches (mm)

Finish


Aluminum

Open or Enclosed Construction


Open

Shipping Weight

40 Pounds

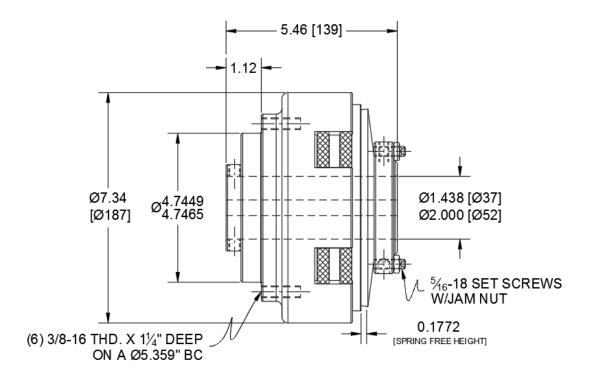

TORQUE vs. SPRING PRESSURE

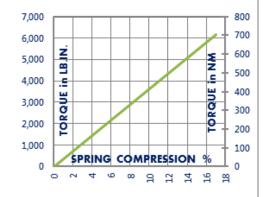

NEW vs. BURNISHED TORQUE

The torque output setting of a friction torque limiter is set at the factory or in the field when new. (All torque settings are +/- 10%.) Repeated overload will burnish the friction surfaces and may increase the slip torque setting. The torque setting should be tested after prolonged or frequent overload and re-set if needed.

PRODUCT SELECTION

Torque capacity is only one factor to consider when making a product selection. Ensure that you will have the right product for the job by contacting our engineering department for application review and selection assistance.




1580 Lake Street Elmira, NY 14901 USA 859-291-0849 machiii.com

engineering@machiii.com

T6A2G-STL

Parts Diagram

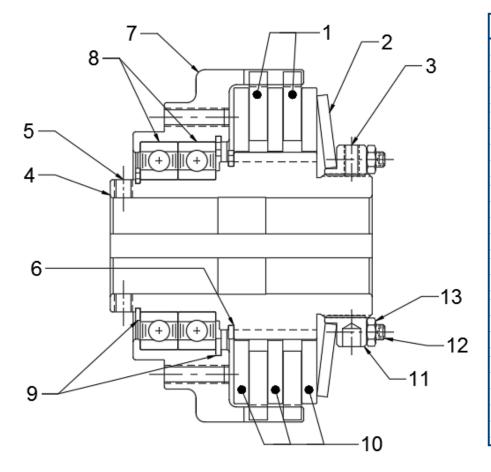

REF#	DESCRIPTION & PARTS INCLUDED	QUANTITY	KIT NUMBER
1 2 3	REPAIR KIT Friction Disc Disc Spring Nylon Point Set Screw	2 1 1	T6A2G-STL-RPRK
4 5 6	DRIVE HUB KIT Drive Hub Set Screw Retainer Ring	1 2 1	T6A2G-STL-HUBK Specify Bore Size When Ordering
7 8 9	SLEEVE KIT Sleeve Bearing Retainer Ring	1 2 2	C6A2G-STL-SLVK
10	DRIVE DISC KIT Drive Disc	3	T6A2G-STL-DRDK
1 3	FACING KIT Friction Disc Nylon Point Set Screw	2	T6A2G-STL-FCGK
11 12 13 3	NUT KIT Nut Oval Point Set Screw Jam Nut Nylon Point Set Screw	1 6 6 1	T6A1G-STL-NUTK

PARTS KITS

The *Repair Kit* contains common wear items for this product. Users are encouraged to stock one or more repair kits considering the number of units installed and the potential downtime if machinery on which the unit is installed is critical equipment. To obtain current pricing and lead time for parts kits, contact customer service.

orders@machiii.com

ADDITIONAL PRODUCT INFORMATION

For illustrated guides showing how Mach III products work, selection guidelines, product manuals, and installation and use recommendations:

https://machiii.com/resources/how-our-products-work

For information about how to order, return policy and warranty information:

https://machiii.com/resources/how-to-order



859-291-0849 machiii.com engineering@machiii.com